



# Methamphetamine / MDMA / GHB Drug Detection Training

## M39 Wipes (TWO-PART POUCH)



# M39 // OVERVIEW



## WHAT CAN M-39 WIPES DETECT

- methamphetamines, MDMA, and GHB

## WHAT FORMS CAN M-39 WIPES TEST

- powders, pills, liquids, residues, trace, and bulk

## COLOR-CHANGING TECHNOLOGY

- When M-39 comes in contact with methamphetamine, MDMA, bath salts or others, it turns blue/purplish-blue, to indicate meth, or its analogues, is present
- Positive result color will match the box color



Note: The Trace-Eye-D kit is intended to be used for **presumptive identification purposes only**, and all substances tested should be subjected to more definitive examination by scientists in a properly equipped crime laboratory.

# M39 // HOW TO USE



## Open. Wipe. Look.

**Reduce cross-contamination and exposure to M39, test surfaces and samples by wearing industry-standard personal protective equipment (PPE) such as nitrile gloves, eye protection, and N95 mask equivalent.**

1

**ACTIVATE + OPEN** the pouch and remove the wipe.

1. Fold bottom portion of pouch in half.
2. Squeeze folded portion until frangible seal breaks. User should hear a "pop" sound when internal seal breaks.
3. Thoroughly work the liquid from the upper small chamber down into the bottom chamber containing the towelette.

Do not unfold towelette before or after use. Doing so will result in difficulty observing the results.

2

**WIPE** it across the surface to be tested. For best results, sample very small amounts of the substance on the margin of the wipe.

3

**LOOK** to see if the formula on the wipe changes color. Allow up to 30 seconds to allow a color reaction to develop

- negative result // no color change
- positive result // test turns blue/purplish-blue




# M39 // RESULTS

*Open. Wipe. Look.*

**NEGATIVE Result**  
*no color change*



**POSITIVE Result**  
*test turns blue/purplish-blue*

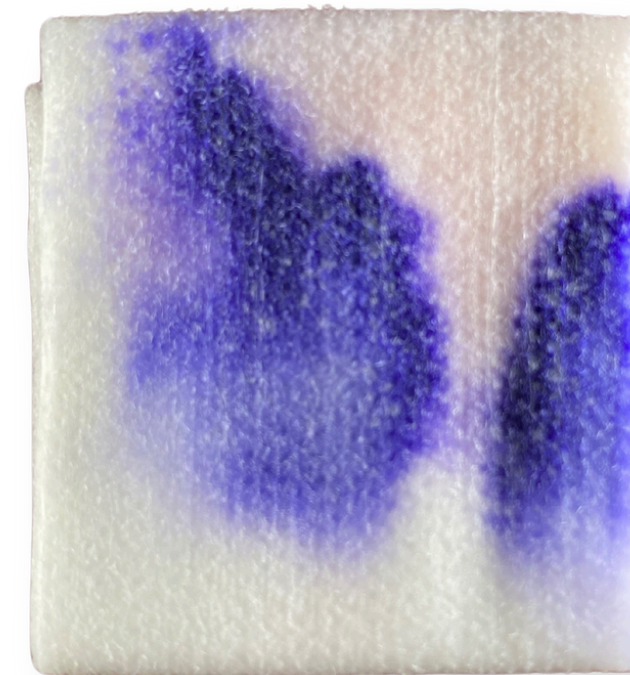

# M39 // POST TEST



*Open. Wipe. Look.*

***All TRACE EYE-D products are safe for disposal in the common waste stream without neutralization or other special treatment, provided the wipe is not contaminated with drug residue***

- 1** **PHOTOGRAPH + STORE** the wipe with a date/time stamp, if required for evidence retention, as the color of the wipe may change over time.
- 2** **DISPOSE** of wipe in accordance with federal state and local environmental laws. No neutralization is required. Can be disposed of in the common waste stream.
- 3** **WASH HANDS + CHANGE** your gloves before conducting additional tests after a positive result is found.

Interested in additional training for your team?  
TRAINING SESSION NOW



BOOK A LIVE